

### Turn the Radio On or Off

1. Rotate the **On/Off/Volume** knob clockwise. You will hear the self-test pass tone and see the LED indicator flash green.
2. Rotate the **On/Off/Volume** knob counterclockwise until you hear a click and the LED indicator turn off.

### Adjust the Volume

1. Turn the **On/Off/Volume** knob clockwise to increase the volume, or counterclockwise to decrease the volume.

### Select a Radio Channel

1. Turn the **Channel Selector** knob clockwise or counterclockwise until you reach the desired channel.

### Receive

1. Turn radio on and adjust volume to the desired level.
2. Select desired channel.
3. Listen for voice activity. The LED indicator flashes red while your radio is receiving.

### Transmit

1. Hold the radio vertically 1 to 2 inches (2.5 to 5 cm) from your mouth. Press the **PTT** button to talk. The LED indicator lights steady red while the call is being sent.
2. Release **PTT** button to listen.

### Start or Stop System Scan

1. Press the preprogrammed **Scan** button to start scan. The LED indicator blinks green during scan operation.
2. Press the preprogrammed **Scan** button again to stop scan.

### Start or Stop Auto Scan

1. Select a channel that has been preprogrammed for Auto Scan by your dealer/programmer.
2. Select a channel that has **not** been preprogrammed for Auto Scan by your dealer/programmer.


### Delete a Nuisance Channel During Scanning

1. While radio is on a nuisance channel, hold down preprogrammed **Nuisance Delete** button until you hear a tone.
2. Release **Nuisance Delete** button.



## EP450™ Quick Reference Card

Record the functions for your radio's programmable buttons in the table provided below.

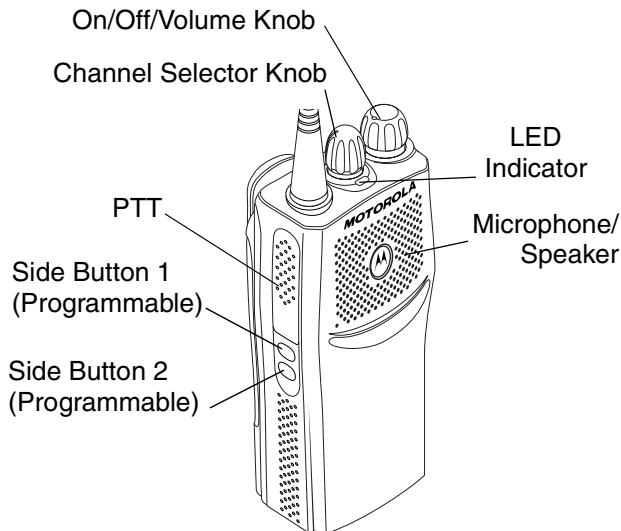

Button	Function	Short Press	Long Press	Hold Down	Page

## Restore Channels to the Scan List

Power off the radio then turn it on. – OR – Press the preprogrammed **Scan** button to stop the scan. The Deleted Nuisance Channels are restored to the scan list.  
– OR – Select a channel that has **not** been preprogrammed by your dealer/programmer to stop Scan. Once you return to the original channel, the deleted nuisance channels are restored to the scan list.

## LED Indicators

LED State/Color	Indication
<b>Radio Call</b>	
Red	Transmitting
Flashing Red	Receiving
Flashing Red	Channel Busy
<b>Scan</b>	
Flashing Green	Scanning for activity
<b>Call Alert</b>	
Flashing Yellow	Indicates receiving a Call Alert
<b>Selective Call</b>	
Flashing Yellow	Indicates receiving a Selective Call
<b>Sticky Monitor/Open Squelch</b>	
Yellow	While monitoring

## Audio Indicators for Programmable Buttons

Programmable Buttons	Positive Indicator Tone	Negative Indicator Tone
Scan	<b>Start</b>	<b>Stop</b>
Power Level	<b>High</b>	<b>Low</b>
Squelch	<b>Tight</b>	<b>Normal</b>
Repeater/Talkaround	<b>Does not use</b> repeater	<b>Uses</b> repeater
VOX	<b>Enabled</b>	<b>Disabled</b>
Silent Monitor/Open Squelch	–	<b>Enabled</b>
Option Board	<b>Enabled</b>	<b>Disabled</b>
Escalart	<b>Enabled</b>	<b>Disabled</b>

You can check battery charge status if your dealer has preprogrammed one of the programmable buttons. Hold down the preprogrammed **Battery Indicator** button. The charge status is shown on the display.

Battery Level	LED Indicator
Good	Green
Sufficient	Yellow
Low	Flashing Red
Very Low	None